Wyse P20 Dual VESA Mount Installation Instructions

The bracket enables a Wyse P20 zero client to be mounted to a wall or on most VESA compliant mounting surfaces and monitors. Both VESA 75 mm and 100 mm mounting patterns are supported. The mounting bracket consists of two (2) pieces. The largest bracket piece attaches to the mounting surface using the VESA mounting patterns. User-provided hardware must be used that can withstand a force of 25 pounds (11.35 kilograms). The zero client is inserted in a vertical position and cables are attached. The smaller bracket piece attaches to the VESA compliant mounting monitor. The monitor bracket and mounted wall bracket pieces are then joined with the provided four (4) thumb screws.

Notes

When determining location, take into account the cable lengths of the monitor, keyboard, mouse, power supply, and peripherals.

Mount the zero client only as indicated; improper orientation (where the back panel or front panel is facing down) could inhibit the dissipation of heat from the device and damage it.

Do not enclosed the zero client in a confined environment without proper ventilation. If you have questions, contact the Wyse Sustaining Engineering Group.

Use the following instructions to mount the zero client:

1. Attach the largest bracket to the mounting surface (a swing arm mount is shown). The mounting surface can have either the VESA 75 mm or 100 mm mounting pattern. The bracket should be placed upright as shown. Secure the bracket with proper user-provided hardware that can withstand a force of 25 pounds (11.35 kilograms).

Note

If installing on a hollow wall, any standard anchoring method may be used, such as screws, butterfly anchors, or expansion bolts.

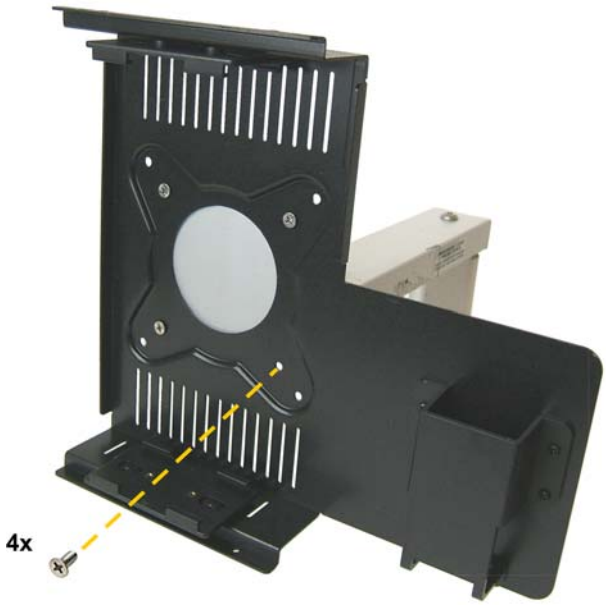

2. Slide the zero client into the mounted bracket as shown using the pre-assembled guide rails until it clicks into place. The power button must be positioned as shown.

3. If you have mounted the bracket to a wall, now is most convenient time to attach all desired connections to the zero client.

4. Position the remaining bracket on the monitor as shown to match a set of mounting holes. Both VESA 75 mm and 100 mm mounting patterns are supported. The bracket should be placed with the turned edge on top (pointing downward). Secure with four (4) user-provided screws (do not overtighten).

Note

If you have mounted the zero client bracket to a wall, now is the most convenient time to attach all desired connections to the monitor before assembling the two brackets pieces together.

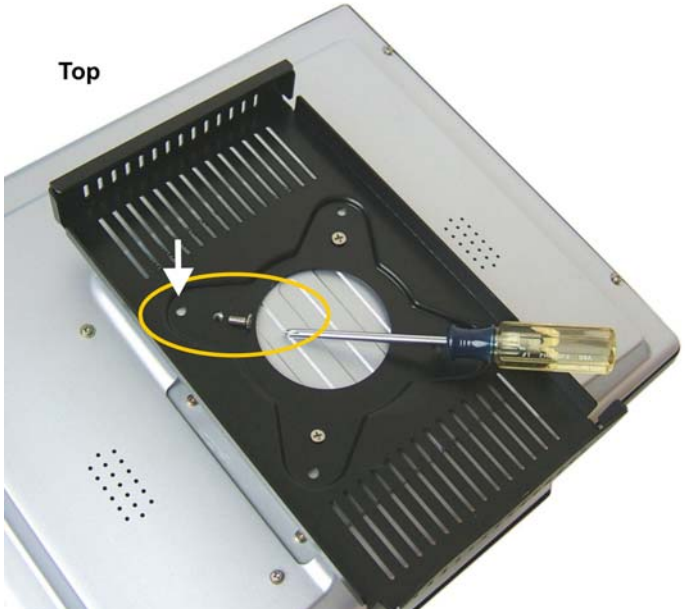

5. To assemble the two brackets together, face the mounted monitor bracket towards the mounted wall bracket. Lift the monitor bracket a little higher than the wall bracket, and tipping it forward at the top, guide it downward so that the monitor bracket's turned edge hooks over the wall bracket's raised edge.

6. Line up the screws holes of the bracket pieces (two on top and two on bottom) and secured with four (4) four thumb screws provided (top thumb screws are shown). Do not overtighten.

7. Make all desired connections, and then connect the power adapter's AC power cable to an electrical outlet.

883854-21L Rev. A
September 2010
©2010 Wyse Technology Inc. All rights reserved.